


BRICK LAYING
WOOD EVAPORATOR
2X4 CLASSIC

TOOLS AND NECESSARY MATERIAL

- BRICK SAW
- TRUCEL
- CEMENT MIXER (FOR MANDREL)
- MEASURING TAPE
- 90X BRICK #66868
- 10X BRICK #66869
- 1X CEMENT BUCKET #668664

STEP #1

PROTECT THE EXTERIOR OF THE EVAPORATEUR

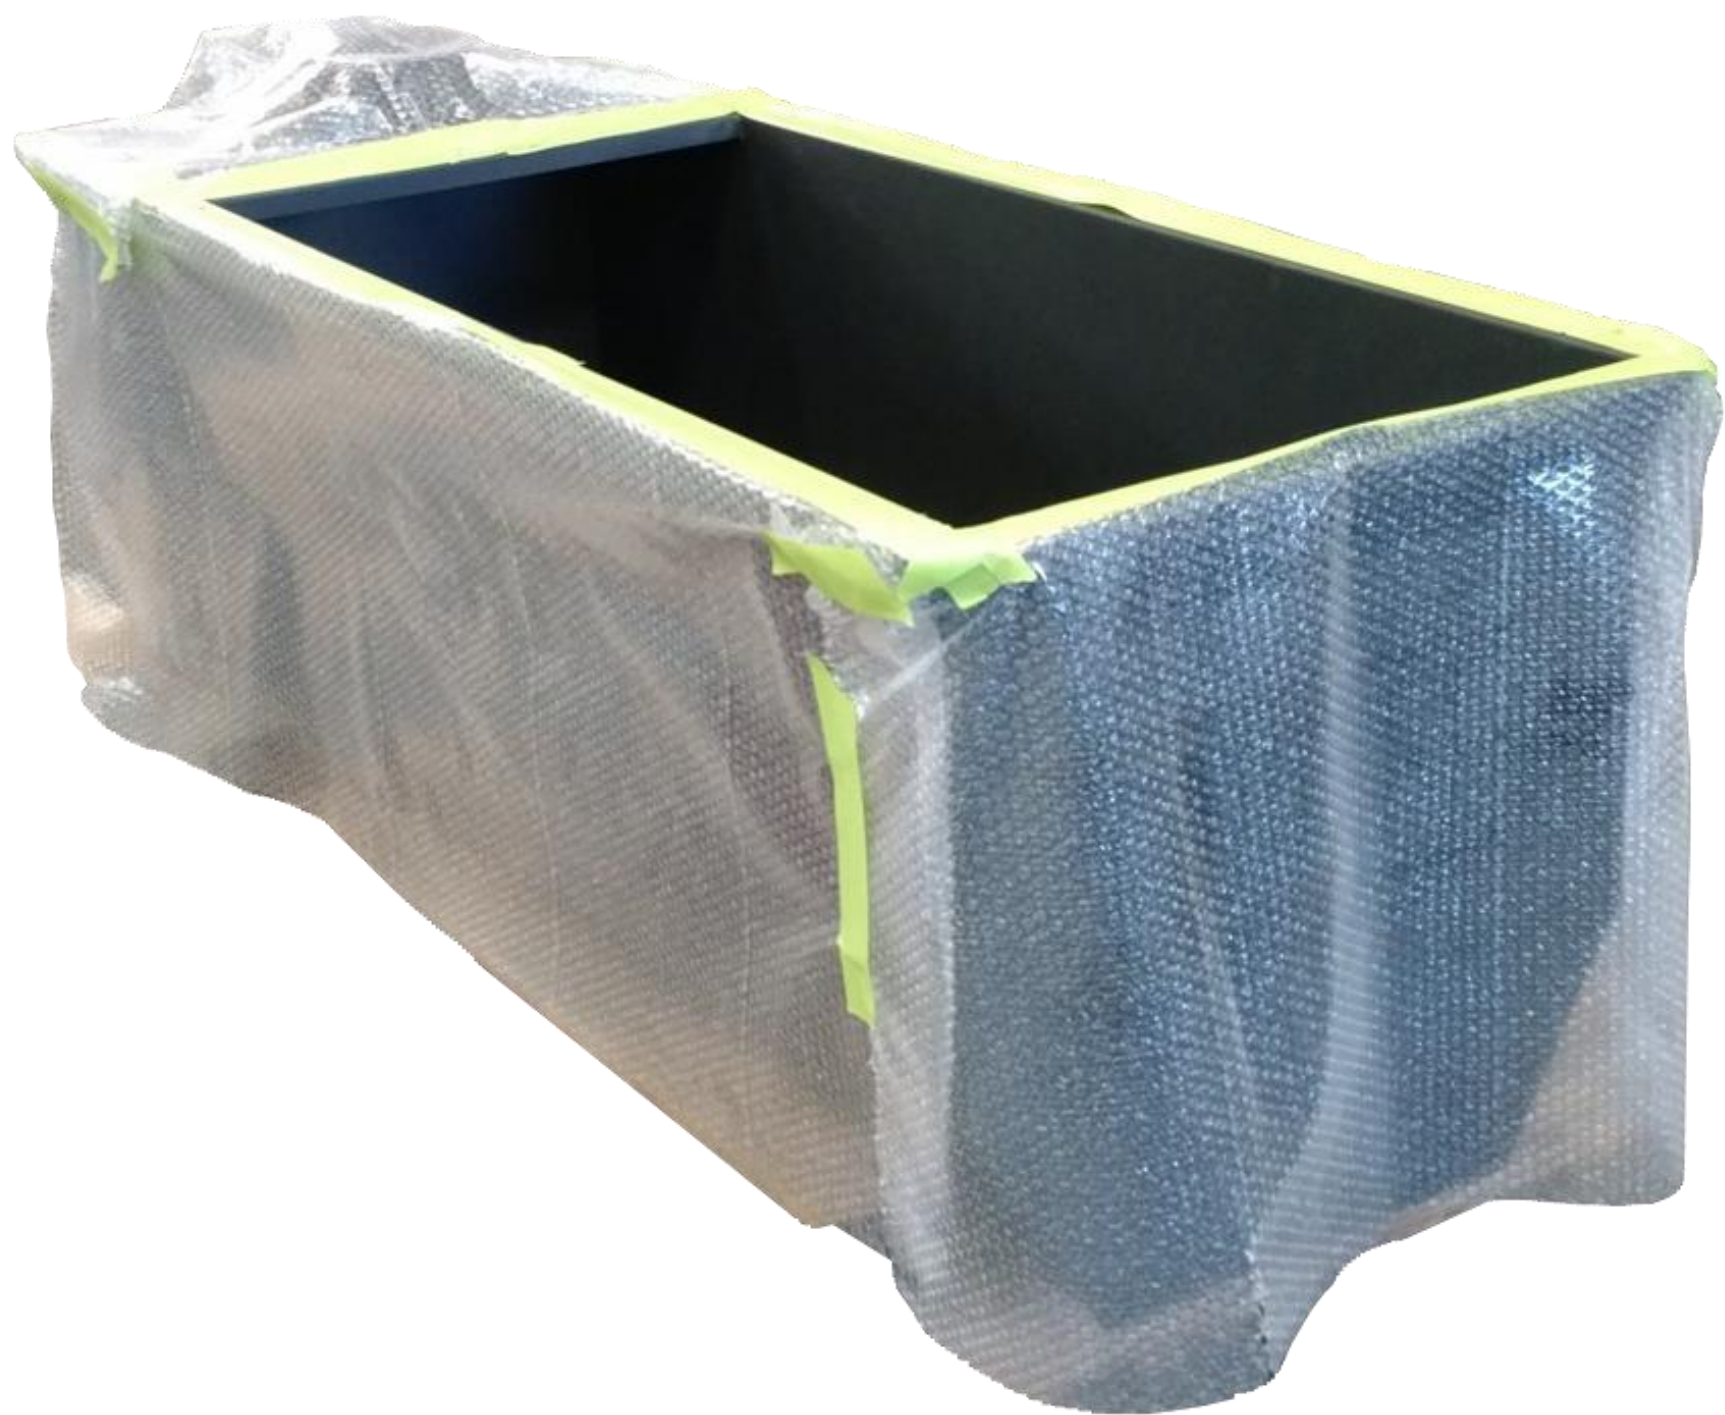

STEP #2

LAY BRICKS ON THE BOTTOM OF THE EVAPORATOR

LAY THE BRICKS IN A STRETCHER BOND PATTERN
(BREAK THE JOINT)





STEP #3

LAY THE BRICKS FOR THE FIRST ROW
OF THE REAR WALL

AN ANGLE CUT IS REQUIRED ON THE CORNER
OF THE BRICKS TOWARDS THE EXTERIOR







STEP #4

DO THE FIRST ROW OF BRICKS ON THE OTHER SIDES



STEP #5

LAY THE BRICKS ON THE SIDE AND REAR WALLS.

CROSS THE BRICKS IN THE REAR CORNERS,
SO THAT YOU DO NOT HAVE A JOINT.









STEP #6

THE LAST ROW IS DONE WITH THE SMALL BRICKS
1¼ X 4½ X 9 CUT TO NOT EXCEED THE HEIGHT OF THE
EVAPORATOR



LET THE CEMENT DRY FOR A MINIMUM OF
48 HOURS AND THEN GENTLY PRE-COOK AT
LOW HEAT FOR 3 HOURS BEFORE FIRST USE.